

USERS GUIDE

&

INSTALLATION

Model: FBU 70
FBU 71




**Built in
Twin Ovens**

Please read these instructions before installation or using your appliance!

Dear Customer,

By purchasing this product you have chosen an appliance of advanced technology and high quality.

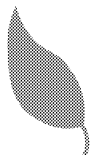

The appliance was produced in modern facilities which meet all environmental standards.

The instructions will help you to operate the appliance quickly and safely.

- Upon delivery, please check that the appliance is not damaged. If you note any transport damage, please contact your point of sale immediately and do not connect and operate the appliance!
- Before you connect and start using the appliance, please read this manual and all enclosed documents. Please note in particular the safety instructions.
- Keep all documents so that you can refer to the information again later on. Please keep your receipt for any repairs which may be required under warranty.
- When you pass on the appliance to another person, please provide all documents with it.

Table of Contents

1 General information 4

Overview	4
Technical Data	5
Accessories supplied with the unit	6

2 Safety Instructions 7

Explanation of safety instructions	7
Basic safety instructions	7
Safety for children	8
Safety when working with electricity	8
Intended use	9
Disposal	9
Packaging material	9
Old equipment	9
Future transportation	9

3 Installation 10

Before installation	10
Installation and connection	12

4 Preparation 14

Tips for saving energy	14
Initial operation	14

Setting the time	14
First cleaning of the appliance	14

5 How to Operate the Oven 15

General information on baking, roasting and grilling	15
How to use the electric oven	15
Operating modes	16
How to operate the oven timer	17
Cooking times table	18
How to operate the grill -Top oven	20
Cooking times table	20
How to use the alarm clock	21



6 Maintenance and Care 22

General information	22
Cleaning the control panel	22
Cleaning the oven	22
Replacing the oven lamp	23

7 Troubleshooting 24

1 General information

Overview

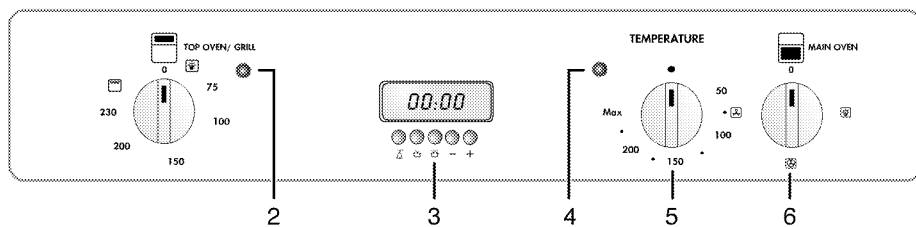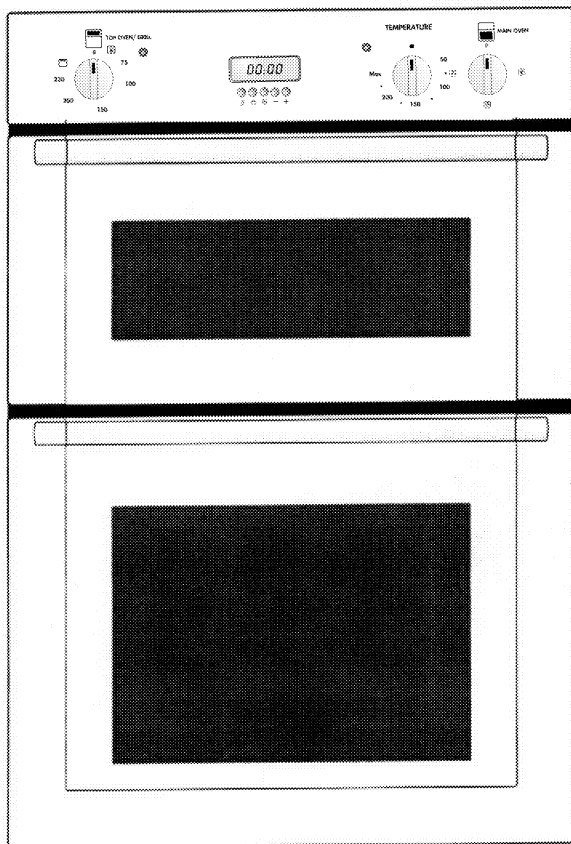

- | | | | |
|---|------------------------------|---|-------------------------------|
| 1 | Top oven/grill function knob | 4 | Thermostat lamp for main oven |
| 2 | Thermostat lamp for top oven | 5 | Main oven heating knob |
| 3 | Digital Timer | 6 | Main oven function knob |

Technical Data

Voltage/frequency	230 V ~ 50Hz
Total electric consumption	4.2 kW
Fuse protection	32 A for monophas
Cable type / cross section	H05VVF 3 x 2,5 mm ² or equivalent
Cable length	max. 2m
Outer dimensions (height/width/depth)	715 mm/596 mm/560 mm
Installation dimensions (height/width/depth)	710 mm/600 mm/600 mm
Bottom oven	Multifunction oven
Inside illumination	240 V/15–25 W/E14 SES/T 300 °C
Top oven	Grill oven
Energy efficiency class [#]	B
Inside illumination	240 V/15–25 W/E14 SES/T 300 °C
Grill power consumption	2.1 kW

[#] Basis: In electrical ovens, the data on energy labels are in conformity with EN 50304. Values were determined under standard load and convection/hot air (if available). Heating mode with an energy efficiency rating specified by EN 50304 is determined in accordance with below priority order depending on functions (modes) availability on the product. 1- Eco fan heating, 2-Slow cooking, 3-Fan heating (hot air), 4-Top and bottom heat with convection air, 5-Top and bottom heating.

Accessories supplied with the unit




Important

Accessories supplied can vary depending on the product model. All the accessories described in the user manual may not exist on your product.


Small baking tray

Can be used for small portions. This baking tray is placed onto the wire shelf.

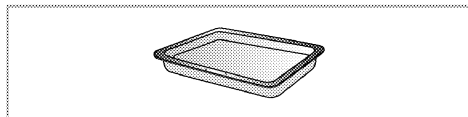


Wire shelf

Can be used for roasting and as deposit for baking, roasting and casserole dishes.

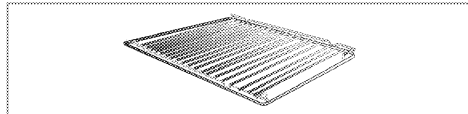


Small wire shelf (for use with supplied tray)

Can be used for grilling and fat collection within tray to prevent the oven from getting dirty.

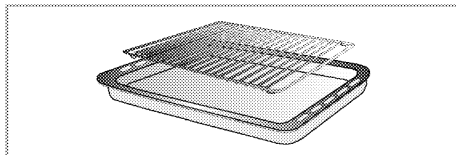


Small wire shelf and fat pan with handle

Can be used for both grilling and fat collection. The fat pan is placed onto the large wire shelf.

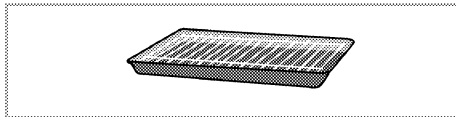

- Apply handle only at the holes in the middle of the fat pan.
- Remove handle for grilling.

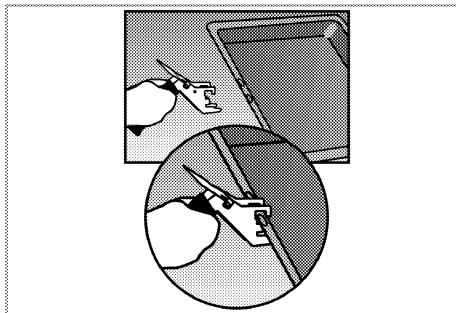

2 Safety Instructions

Explanation of safety instructions

The following types of safety instructions and information are used in this manual. They can be distinguished by the symbol and the initial signal word.



DANGER

High risk of personal injury.

Non-observance may or will cause serious injuries or death.



CAUTION

Risk of personal injury.

Non-observance may or will cause minor or medium injuries.



NOTICE

Risk of material damage.

Non-observance may or will cause damage on the appliance or other objects.



Important

Tip for the user.

Useful information on how to use the appliance. No injury risk information.

Basic safety instructions

- The manufacturer reserves its right to make changes in the technical specifications in order to improve the appliance quality without any prior notice. Figures included in

this manual are for schematic purpose only and may not match exactly with your appliance. Values stated on the markings of the appliance or in other printed documents supplied with the appliance are obtained under laboratory conditions as per relevant standards. These values may vary according to the usage of the appliance and ambient conditions.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Never use when judgement or coordination is impaired by the use of alcohol and/or drugs.
- Do not operate the appliance if it is defective or shows any visible damage.
- Do not carry out any repairs or modifications on the appliance.

However, you may remedy some malfunctions; see *Troubleshooting*, page 24.

- Be careful when using alcoholic drinks in your dishes. Alcohol evaporates in high temperatures and may catch fire when it comes in contact with hot surfaces.
- Do not heat closed food containers and glass jars. Pressure that may build-up in the jar can cause it to burst.
- Ensure that no flammable materials are adjacent to the appliance as the sides become hot during use.
- Do not place baking trays, dishes or aluminium foil directly onto the bottom of the oven. The heat accumulation might damage the bottom of the oven.
Keep all ventilation slots clear of obstructions.
- Appliance may be hot when it is in use. Never touch the hot burners, inner sections of the oven, heating elements etc. Keep children away!
- Always use heat-resistant gloves when putting or removing the dishes into/from your oven.
- Don't use the cooker with front door glass removed.
- Rear surface of the oven gets hot when it is in use. Gas / Electric connection should not touch the rear surface, otherwise the mains cable may get damaged. Do not trap the mains cable between the hot oven door and frame. Do not route the mains cable over the hot cooking section. Otherwise, cable insulation may melt and cause fire as a result of short circuit.

- Check all controls on the appliance are switched off after use.



Important

For the warranty to be valid, the appliance must be installed by a qualified person in accordance with current regulations.

Safety for children

- Accessible parts of the appliance will become hot whilst the appliance is in use and until the appliance has cooled, children should be kept away.
- Accessible parts may be hot when the grill is in use. Young children should be kept away.
- The packaging materials will be dangerous for children. Keep the packaging materials away from children. Please dispose of all parts of the packaging according to environmental standards.
- When the door is open, do **not** load any heavy object on it and do **not** allow children to sit on it. It may overturn or door hinges may get damaged.

Safety when working with electricity

- Any work on electric equipment and systems may only be carried out by authorized qualified persons.
- Even if the oven is off, the cooling fan continues working for a while after turning off the oven.
- In case of any damage, switch off the appliance and disconnect it

from the mains supply by removing the fuse or switching off the circuit breaker.

- Ensure that the fuse rating is correct.

Intended use

The appliance is designed for domestic use only. Commercial use is not admissible.

This appliance should not be used for warming the plates under the grill, hanging towels and dish cloths etc. on the handles, drying and for heating purposes.

The manufacturer shall not be liable for any damage caused by improper use or handling errors.

Disposal

Packaging material



DANGER

Risk of suffocation by the packaging materials!

Keep children away from the packaging materials.

The packaging material and transport locks are made from materials that are not harmful to the environment. Please dispose of all parts of the packaging according to environmental standards. This is beneficial to the environment.

Old equipment



This appliance bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This

means that this appliance must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Electronic appliances not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

Future transportation



NOTICE

Do not place other items on the top of the appliance. The appliance must be transported upright.

Store the appliance's original box and transport the appliance in its original carton. Follow the guidance marks that are printed on the carton.



Important

Verify the general appearance of your equipment by identifying possible damage during the transportation.

To prevent the wire shelf and tray inside the oven from damaging the oven door, place a strip of cardboard onto the inside of the oven door that lines up with the position of the trays. Tape the oven door to the side walls.

If you do not have the original carton

Pack the appliance in bubble wrap or thick cardboard and tape it securely in order to prevent damage during transportation.

3 Installation

Before installation

- Surfaces, synthetic laminates and adhesives used must be heat resistant (100 °C minimum).
 - Kitchen cabinets must be set level and fixed.
 - If there is a drawer beneath the oven, a shelf must be installed between oven and drawer.
 - Some space must remain between the oven's rear wall and the kitchen wall for air to circulate.
- The oven must be installed under a worktop, the fitting dimensions must be appropriate (see diagram opposite):
- **** When installing an induction hob, the thickness of the countertop has to be 50 mm minimum.
- ****The clearance between oven's top and induction hob's bottom must be 15 mm minimum.
1. Installation into a cabinet housing - fig.1.
 - Fix the two runners “L” shaped on each side of the housing. The runners must be positioned under the worktop, they must touch it. They must be at 50 mm from the front of the furniture.
 - Fix the two runners “Z” shaped on each side of the appliance; the largest part on the top of the oven.
 - Slide the appliance into the housing appliance.
 - Fix the appliance to the housing with the screw provided.
 2. Installation between side panels (no housing used) - fig.2.
 - Fix the two runners “L” shaped on each side of the housing. The runners must be positioned under the worktop, they must be at 50 mm from the front of the furniture.
 - Fix the two runners “Z” shaped to the front of the side panels in a vertical position.
- L profiles**
- Fix the two supplied profiles on each side of the housing (in a vertical position).
 - Slide the appliance into position.
 - Fix the appliance to the vertical profiles using screws.
 - The vertical L profiles only have one side edge pre-drilled, this edge attaches to the side panels. Once the appliance is in position drill an appropriate positioned hole in the vertical profiles to align with the front of the oven and secure.
 - The material used for the housing appliance or side panels must be heat resistant (or be covered with such a material).
- In each case of built in situation a gap of 5 mm must be kept between the worktop & the top of the oven.
- A gap of 15 mm is necessary between the back of the housing or side panels and the back of the oven.
- For greater stability, fix the oven into the appliance using by 2 screws in the holes provided in the lateral uprights. Drill a 3 mm hole beforehand in the wall of the appliance to prevent the wood splitting.

Fig.1
Installation into a cabinet housing


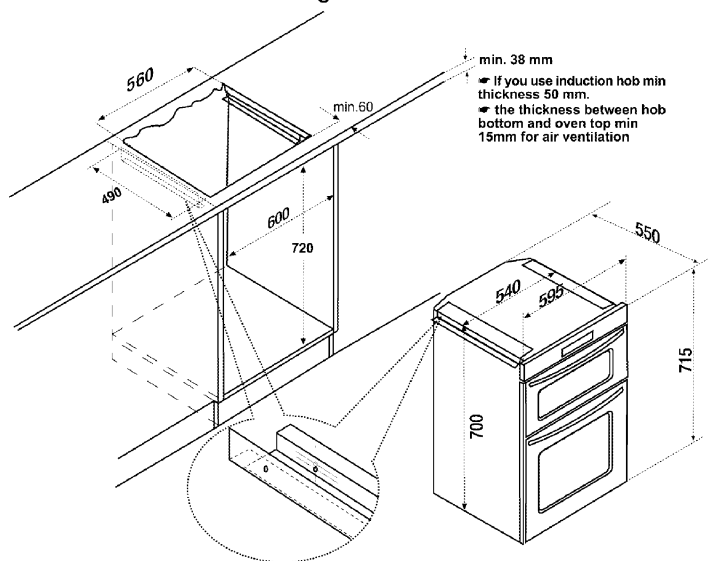


Fig.2
Installation between side panels



Installation and connection

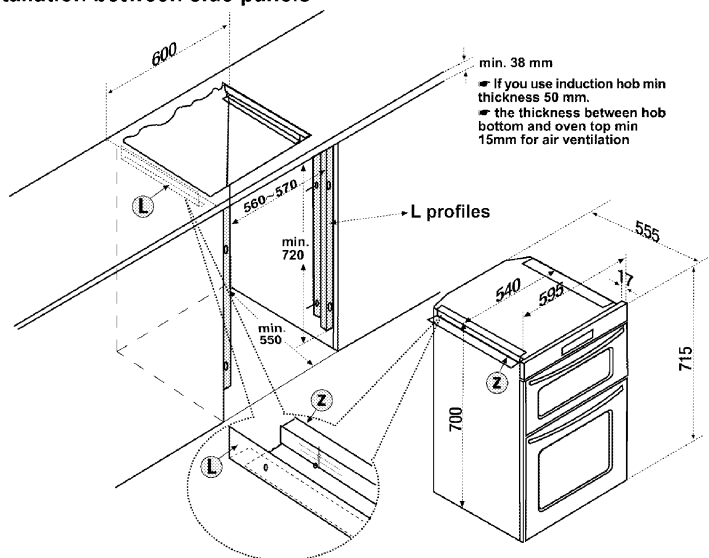

NOTICE

Material damage!

The door and/or handle must not be used for lifting or moving the appliance.

- For installation the appliance must be connected in accordance with all local gas and/or electrical regulations.
- Carry the appliance with at least two persons.
- Use the slots or wire handles located at both sides to move the appliance.



NOTICE

If the appliance has wire handles, push the handles back into the side walls after moving the appliance.

Connection to the mains supply



Important

This appliance must be earthed!

Our company shall not be held responsible for any damage caused by using the appliance without an earthed socket.



DANGER

Risk of electric shock, short circuit or fire by unprofessional installation!

The appliance may be connected to the mains supply only by an authorized qualified person and the appliance is only guaranteed after correct installation.



DANGER

Risk of electric shock, short circuit or fire by damage of the mains lead!

The mains lead must not be clamped, bent or trapped or come into contact with hot parts of the appliance.

If the mains lead is damaged, it must be replaced by a qualified electrician.

- The mains supply must correspond to the data specified on the rating plate of the appliance. The rating plate can be seen when the front door is opened.
- The appliance mains cable must correspond to the specifications and the power consumption; see *Technical Data, page 5*.



DANGER


Risk of electric shock!

Before starting any work on the electrical installation, please disconnect the appliance from the mains supply.

1. This appliance must only be installed by a qualified electrician, eg local electricity company or a NICEIC registered contractor, to a suitable double-pole control unit with a minimum contact clearance of 3 mm in all poles, after appliance has been installed in accordance with IEE regulations. Failure to observe this instruction may result in operational problems and invalidation of the appliance warranty.

Additional protection by a residual current circuit breaker is recommended.

If a cable without a plug is provided please follow wiring instructions below:

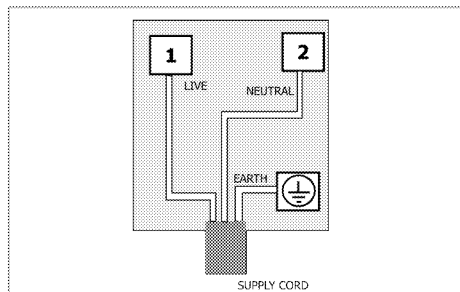

Installation


1. Slide the oven through the cabinet aperture, align and secure.

Fix your oven with the 4 screws.

Final check

1. Connect the appliance to the mains supply and switch on the mains supply.
2. Check function.

For equipment with a cooling fan

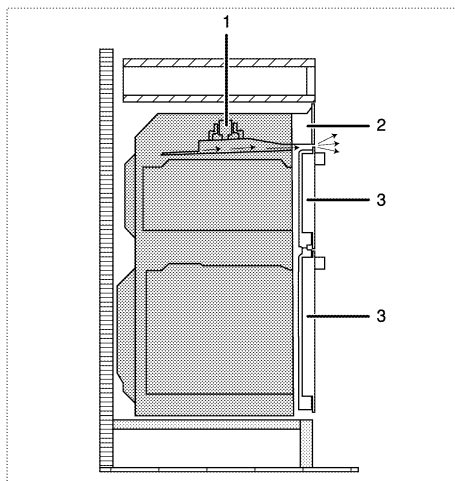

- 1 Fan
- 2 Control panel
- 3 Door

The Built-in cooling fan cools both the built-in cabinet and the front of the appliance.



NOTICE

Cooling fan continues to run for up to 20-30 minutes (approx.) even after the oven is turned off.

4 Preparation

Tips for saving energy

The following tips will help you to use your appliance in an ecological way and to save energy:

- Use dark coloured and enamel coated trays, since the heat transmission will be better.
- While cooking your meals, perform a preheating operation if it is advised in the user manual or cooking instructions.
- During cooking, do not open the oven door frequently.
- Try to cook more than one type of meal within the oven at the same time (You can cook two different meals at the same time by locating cooking bowls on the same shelf). It will be suitable to cook more than one meal after each other. The oven will already be hot.
- Defrost frozen meals before cooking them.
- You can save energy by switching off your oven a few minutes before the end of the cooking time (The oven door should not be opened).


Initial operation

Setting the time



Important

Before using the oven the clock time must be set. If the clock time is not set, the main oven will not work.

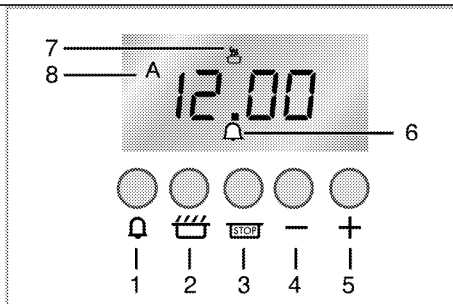

Keys for:

- 1 Alarm clock
 - 2 Coking time
 - 3 End of cooking time
- Keys for time adjustment:

- 4 Minus key
- 5 Plus key

Display symbols for:

- 6 Alarm clock
 - 7 Cooking
 - 8 Automatic
1. Keep key 2 and key 3 pressed.
 2. Set clock with key 4 or key 5. By pressing the key shortly, you advance or reset the clock by one minute. When you keep the individual key pressed, the minutes are advanced or reset quickly.
 3. Release key 2 and key 3.

First cleaning of the appliance



NOTICE

The surface may get damaged by some detergents or cleaning materials.

Do not use aggressive detergents, cleaning powder/cream or any sharp objects.

1. Remove all packaging materials.
2. Wipe the surfaces of the appliance with a damp cloth or sponge and dry with a cloth.

5 How to Operate the Oven

General information on baking, roasting and grilling



DANGER

Risk of scalding by hot steam!

Take care when opening the oven door as steam may escape.

Tips for baking

- Use non-stick coated appropriate metal plates or aluminum containers or heat-resistant silicone moulds.
- Make best use of the space on the rack.
- It is recommended to place the baking mould in the middle of the rack.
- Select the correct shelf position before turning the oven or grill on - don't move oven shelves when hot.
- Keep the oven door closed..

Tips for roasting

- Seasoning with lemon juice and black pepper will improve the cooking performance when cooking a whole chicken, turkey or a large piece of meat.
- Meat with bones takes about 15 to 30 minutes longer before it is cooked than a roast of the same size without bones.
- You should calculate about 4 to 5 minutes cooking time per centimeter height of the meat.
- Let meat rest in the oven for about 10 minutes after the cooking time. The juice is better distributed all

over the roast and does not run out when the meat is cut.

- Fish in a fire-resistant dish should be placed on the rack at the medium or lower level.

Tips for grilling

Grilling is ideal for cooking meat, fish and poultry and will achieve a nice brown surface without it drying out to much. Flat pieces, meat skewers and sausages are particularly suited for grilling as are vegetables with a high water content such as tomatoes and onions.

- Distribute the pieces to be grilled on the wire shelf.
 - If the grilling is on the wire shelf, locate a dripping pan under it in order to collect the fat.
 - Add some water in the dripping pan for easy cleaning.
-



NOTICE

Fire danger due to food which is unsuitable for grilling!

Only use food for grilling which is suitable for intensive grilling heat. Do not place the food too far in the back of the grill. This is the hottest area and fat food may catch fire.

How to use the electric oven




Important

Before using the oven the clock time must be set. If the clock time is not set, the oven will not work.

As your appliance has two ovens please ensure that the appropriate

function and thermostat control are selected for the oven you wish to use.

Select temperature and operating mode

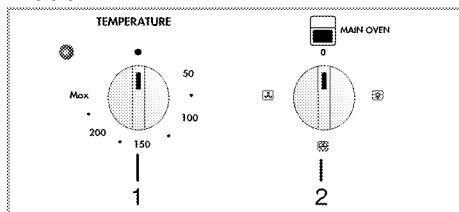

- 1 Main oven heating knob
- 2 Main oven function knob


The operating modes of the electric oven are selected with the function knob. The temperature is adjusted with the thermostat knob.

All oven functions are turned off by turning the relevant knob to off (upper) position.

1. Set thermostat knob to the desired temperature.
 2. Set function knob to the required operating mode.
- » The oven heats up to the adjusted temperature and maintains it. During heating, temperature lamp stays on.

Switch off electric oven

Turn function knob and thermostat knob to off position (top).

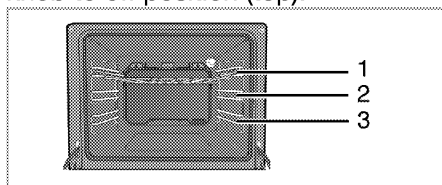

It is important to position the wire grill on wire shelf correctly. The wire grill must be placed so that it will fit into the opening of the wire shelf as illustrated in the figure.

Operating modes

The order of operating modes shown here might deviate from the arrangement on your appliance.

Oven lamp



The oven is not heated. Only the oven lamp is lit. Possibly also the outside cooling fan is running to prevent cabinets from heat.

Operating with fan



The oven is not heated. Only the fan (in the rear wall) is in operation. Frozen granular food is thawed slowly at room temperature and cooked food is cooled down.

Hot air



The heating ring with fan (in the rear wall) is in operation. The hot air is distributed evenly and quickly all over the oven by the fan. In most cases, preheating is not required. Suitable when several levels are used for the preparation of food. Suitable for cooking with multi trays.


Surface grill



The large grill (under the oven roof) is in operation. Suitable for grilling larger quantities.

- Put big or medium-sized portions in correct shelf position under the grill heater for grilling.
- Set the temperature to maximum level.
- Turn the food after half of the grilling time.

How to operate the oven timer

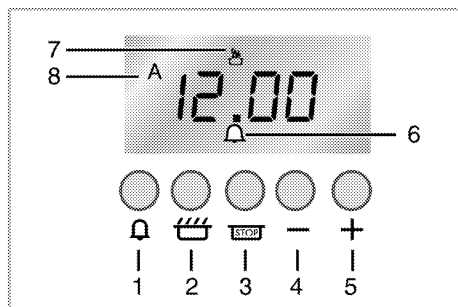

Keys for:

- 1 Alarm clock
 - 2 Cooking time
 - 3 End of cooking time
- Keys for time adjustment:

- 4 Minus key
- 5 Plus key

Display symbols for:

- 6 Alarm clock
- 7 Cooking
- 8 Automatic



Important

The maximum time to be set for the end of the cooking process is 23 hours and 59 minutes. In case of power cut, program will be canceled. Reprogram is needed.



Important

When you press key **2** during the cooking process, the display will show the remaining cooking time for a short moment.

Switch on fully automatic operation


In this mode of operation, you can define when the oven is to **'switch on/off'** automatically.

1. Keep key **2** pressed.
2. Use key **4** or key **5** to set the time at which the dish in the oven shall be cooked. By pressing the key shortly, you advance or reset the clock by one minute. When you keep the key pressed, the minutes are advanced or reset quickly.
3. Release key **2**.
 - » The automatic symbol is illuminated on the display.
4. Keep key **3** pressed.
5. Set end of the cooking time with key **4** or key **5**. By pressing the key shortly, you advance or reset the clock by one minute. When you keep the key pressed, the minutes are advanced or reset quickly.
6. Release key **3**.
7. Put your dish into the oven.
8. Select operating mode and temperature.
 - » The oven is heated up to the set temperature and keeps this temperature until the end of the cooking time that has been selected. During the cooking process, the cooking symbol on the display is lit.
9. Press key **2** as soon as the cooking process has been completed and an alarm sounds.
10. Switch the oven off with the thermostat knob and/or the function knob.
11. Press key **2** and key **3** simultaneously.
 - » The automatic symbol is illuminated on the display. The cooking symbol is on, indicating the oven is ready again for direct operation without time.

Switch on semi-automatic operation

In semi-automatic mode you can define when the oven is to "switch off" automatically.

- 1. Keep key 2 pressed.



Important

The maximum cooking time can be 10 hours.


- 2. Use key 4 or key 5 to set the time at which the dish in the oven shall be cooked. By pressing the key shortly, you advance or reset the clock by one minute. When you keep the key pressed, the minutes are advanced or reset quickly.
- 3. Release key 2.
 - » The number 8 is shown in the display.
- 4. Put your dish into the oven.
- 5. Select operating mode and temperature.
 - » The oven is heated up to the set temperature and keeps this temperature until the end of the cooking time that has been selected. During the cooking process, the cooking symbol on the display is lit.
- 6. Press key 2 as soon as the cooking process has been completed and an alarm sounds.
- 7. Switch the oven off with the thermostat knob and/or the function knob.

- 8. Press key 2 and key 3 simultaneously.
 - » The automatic symbol disappears from the display. The cooking symbol is on, indicating the oven is ready again for direct operation without time.

Interrupting the cooking process

- 1. Press key 2 and key 3 simultaneously.
 - » The automatic symbol is illuminated on the display. The cooking symbol is on, indicating the oven is ready again for direct operation without time.
- 2. Switch the oven off with the thermostat knob and/or the function knob.


Cooking times table



Important




The values indicated in the table below are data indicative. They may vary according to the type of food as well as your preferences of cooking.




Baking and roasting




Important

Level 1 is the **bottom** level in the oven.

Food	Temperature (°C)	Insertion level	Cooking time (min.) (approx.)
			
White meat			
Chicken	175 ... 200	1	55
Turkey/duck	190	1	15/1lb + 20 min.
Sausages (1lb)
Read meat			
Roast pork	170	2	30/1lb + 30 min.

Food	Temperature (°C)	Insertion level	Cooking time (min.) (approx.)
			
Casserole beef	150	2	120
Lamb chops
Roast beef rare	200 ... 225	2	10/1lb + 20 min.
Lamb	175	2	25/1lb + 25 min.
Fish and various meat			
Baked fish	175 ... 200	2	45
Vegetables			
Jacket potatoes	200	2	60 ... 90
Roast vegetables	200	1	60 ... 90
Roast potatoes	200	2	45 ... 60
Rice	200	1	45
Stuffed pepper	200	2	40
Cakes and pastry			
Victoria sandwich	160	2	25 ... 30
Cake-Madeira cake	150	2	60 ... 70
Scones	225	2	10 ... 12
Meringues	90	2	140 ... 160
Small cakes	160	2	30 ... 35
Choux pastry	180	2	30 ... 35
Angel cakes	150	2	40 ... 60
Short breads-Rich	170**	3	15 ... 20
Short crust pastry	180	2	10 ... 20
Fruit crumble	170	2	60
Short or puff pastry	170	2	25 ... 30
Fruit pie	180	1	35 ... 40
Tart base	160	2	15 ... 25
Baked custard	150	2	20 ... 30
Rich Fruit cake	130	1	210
Lemon-Meringue cake	pastry 180 meringue 130	2	15 20 ... 25
Various			
Steak and kidney pie	180	2	90 ... 100
Rice pudding	150	1	90
Yorkshire pudding	160	1	30 ... 40
Bread base pizza	200**	2	35 ... 45
Quiche	200	2	35 ... 45
Souffles	175	1	45
Bread	220**	1	30 ... 40
Lasagne	160	2	40
1lbs = per 450 g			
**= with preheating			

How to operate the grill -Top oven

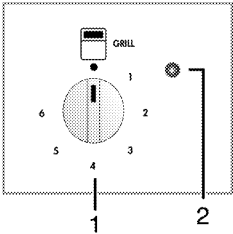

- 1 Grill function knob
- 2 Thermostat lamp for grill oven

Hot surfaces may cause burns
Close oven door during grilling.

The grill is operated by the grill control knob. The grill is switched off if the grill control knob is in off position (top).


Switch on grill

- 1. Preheat for approximately 5 minutes, if it is necessary.
 - 2. Then set desired grill setting.
- » The thermostat lamp is switched on.

Switch off grill

- 1. Turn grill control knob to off position (top).

Top oven

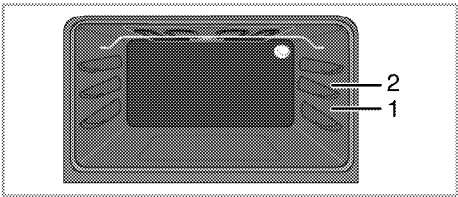

For best cooking results, place the shelf to position as figure shown.

Cooking times table for grilling

Baking and roasting For top oven


Important
Level 1 is the **bottom** level in the oven.

Food	Insertion level		Temperature				Cooking time
White Meat Pork chops	2		175 °C				10...20 min.
Red Meat Lamb chops Kebabs	1	1	175 °C				10...15 min. 15...25 min.
Toast	1		235 °C				3...5 min.
Vegetables Bakes (Vegetables, Pasta) Roast potatoes	1		175 °C				30 min.
Fish Fillets (Salmon/Cod...) Prawns	2	2	175 °C				5...7 min. 7...10 min.
Knob posititon	1	2	3	4	5	6	
Temperature °C	40	85	120	170	210	235	

How to use the alarm clock

In addition to using the timer for cooking, it can be also used as a reminder or an alarm clock.

As soon as the defined period of time has expired, the alarm clock will emit a signal. The alarm clock has no influence on the functions of the oven.

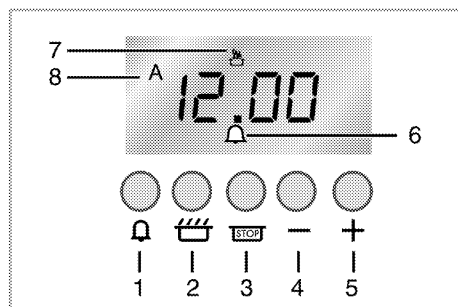

Keys for:

- 1 Alarm clock
- 2 Coking time
- 3 End of cooking time

Keys for time adjustment:

- 4 Minus key
- 5 Plus key

Display symbols for:

- 6 Alarm clock
- 7 Cooking
- 8 Automatic

Setting the alarm clock

1. Keep key **1** pressed.



Important

The maximum alarm time can be 23 hours and 59 minutes.

2. With key **4** or key **5** you can set the period of time which is to elapse before the alarm signal sounds. By pressing the key shortly, you advance or reset the clock by one minute. When you keep the key pressed, the minutes are advanced or reset quickly.
- » The alarm clock symbol on the display lights up.
3. Release key **1**.



Important

When you press key **1** while the alarm clock is activated, the display will show the remaining cooking time for a short moment.

Switching off the alarm

1. Press key **1** when the alarm is sounded and the alarm clock symbol disappears.

In order to cancel set alarm time;

1. To reset the alarm time, keep key **1** pressed.
2. Keep key **4** pressed until "**0.00**" is shown as remaining time on the display.
- » The alarm clock symbol in the display disappears and an alarm is sounded.
3. Release key **1**.

6 Maintenance and Care

General information



DANGER

Risk of electric shock!

Switch off the electricity before cleaning appliance to avoid an electric shock.



DANGER

Hot surfaces may cause burns!

Allow the appliance to cool down before you clean it.



NOTICE

The surface may get damaged by some detergents or cleaning materials.

Do not use aggressive detergents, cleaning powder/cream or any sharp objects.

Clean the appliance thoroughly after each use; in this way it will be possible to remove cooking residues more easily, thus avoiding these from burning the next time the appliance is used.

No special cleaning agents are required for cleaning the appliance. It is recommended to use warm water with washing liquid, a soft cloth or sponge and use a dry cloth for drying.

Do not use any abrasive cleaning materials!



Important

Do not use steam cleaners for cleaning.

Cleaning the control panel



NOTICE

Damage of the control panel!


Do not remove the control knobs for control panel cleaning.

Clean control panel and control knobs.

Cleaning the oven

No oven cleaner or any other special cleaning agent is required for cleaning the oven. It is recommended to wipe the oven with a damp cloth while it is still warm.

The insertion grates at the side are hooked into the oven wall and can be removed for cleaning.

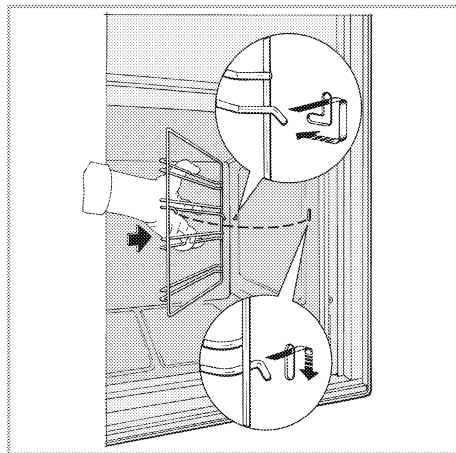

Clean oven door

Don't use any harsh abrasive cleaners or sharp metal scrapers for cleaning the oven door. They could scratch the surface and destroy the glass.

Replacing the oven lamp



DANGER

Hot surfaces may cause burns!

Make sure that the appliance is switched off and cooled down in order to avoid the risk of an electrical shock.


The oven lamp is a special heat-resisting (T 300 °C) electric light bulb; see *Technical Data*, page 5. Oven lamps can be obtained from a good local electrical store.



NOTICE

Position of lamp may vary from diagram.

1. Switch off the appliance at the mains.
2. Unscrew glass cover by turning anti-clockwise.

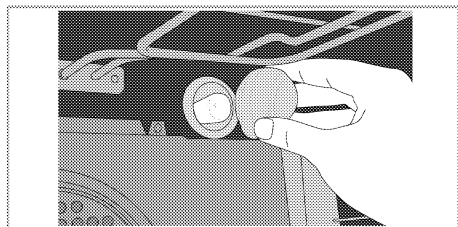

3. Unscrew oven lamp by turning anti-clockwise and replace it with new one.
4. Refit the glass cover.

7 Troubleshooting



DANGER

Risk of electric shock, short circuit or fire by unprofessional repairs!

Repairs on the appliance must be carried out by an approved service centre.

Normal operating conditions

- Smoke and smell may emit for a couple of hours during the first operation.
- It is normal that steam escapes during operation.
- When the metal parts are heated, they may expand and cause noise.

Before you call the service, please check the following points.

Electrical equipment

Malfunction/problem	Possible cause	Advice/remedy
The appliance does not work.	The mains fuse is defective or has tripped.	Check fuses in the fuse box. If necessary, replace or reset them.
Oven light does not work	Oven lamp is defective.	Replace oven lamp.
	No current.	Check fuses in the fuse box. If necessary, replace or reset them.
Oven does not heat.	Function knob and/thermostat knob are not set.	Set function knob and thermostat knob.
	If the appliance has a timer, the timer may not be set.	Set the time.
	No power.	Check mains supply and fuse box.

Clock/ timer (If the appliance has a digital timer)

Malfunction/problem	Possible cause	Advice/remedy
Clock display is blinking or clock symbol is on.	Power was interrupted previously.	Set time Then switch the oven off with function knobs, set the oven function again.

If the problem has not been solved:

1. Separate unit from the mains supply (deactivate or unscrew fuse).
2. Call the appropriate telephone number for your area as shown in the Guarantee and Service section of this user manual.



Important

Do not attempt to repair the appliance yourself. There are no customer service items inside the appliance.

Your Cooker is guaranteed against the cost of breakdown repairs for twelve months from the date of the original purchase.

What is covered?

- Repairs necessary as a result of faulty materials, defective components or manufacturing defects.
- The cost of functional replacement parts, but excluding consumable items.
- The labour cost of a Leisure Consumer Products approved repairer to carry out the repair.

What is not covered?

- Transit, delivery or accidental damage or misuse and abuse.
- Cabinet or appearance parts, including knobs, flaps, handles or container lids.
- Accessories or consumable items including but not limited to filters and light bulbs.
- Repairs required as a result of unauthorized repair or inexperienced installation that fails to meet the requirements contained in the user instruction book.
- Repairs to products used on commercial or non-residential household premises.

Important notes

- Your Leisure Consumer Product is designed and built for domestic household use only.
- The guarantee will be void if the product is installed or used in commercial or non-residential domestic household premises.
- The product must be correctly installed, located and operated in accordance with the instructions contained in the User Instruction Booklet provided.
- Professional installation by a qualified Electrical Domestic Appliance Installer is recommended for all Washing Machines, Dishwashers, Electric Cookers and Cooker Hoods.
- Gas Cookers must only be installed by a Gas Safe (or BORD GAIS) registered Gas Installer.
- The guarantee is given only within the boundaries of the United Kingdom and the Republic of Ireland.
- The guarantee is applicable only to new products and is not transferable if the product is resold.
- Leisure Consumer Products disclaims any liability for incidental or consequential damages.
- The guarantee does not diminish your statutory or legal rights.

Please keep your purchase receipt or other proof of purchase in a safe place; you will need to have it should the product require attention under guarantee.

You should also complete the details below; it will help us assist you when requesting service. (The model is printed on the Instruction Booklet and Serial Number is printed on the Rating Label affixed to the appliance)

Model No: _____

Serial No: _____

Retailer: _____

Date of purchase: _____

For service under guarantee simply telephone the appropriate number below

UK Mainland & Northern Ireland

Fridges & Freezers	0845 600 4903
Electric Cookers	0845 600 4921
Gas & Dual Fuel Cookers	0845 600 4921
Washing Machines & Dishwashers	0845 600 4906

Republic of Ireland

All Refrigeration,	01862 34 11
All Cookers,	
Washing Machines	
& Dishwashers	

Before requesting service please check the trouble-shooting guide in the Operating Instructions as a charge may be levied where no fault is found even though your product may still be under guarantee.

Service once the manufacturer's guarantee has expired

If you have purchased an extended guarantee please refer to the instructions contained within the extended guarantee agreement document. Otherwise please call the appropriate number above where service can be obtained at a charge.

Should you experience any difficulty in obtaining service please contact the Leisure Consumer Products Customer Help-Line.

Tel: 0845 600 4918 e-mail: service@leisurecp.co.uk

Leisure Consumer Products
36-38 Caxton Way
Watford
Herts WD18 8UF
Tel: 0845 6004916
Facsimile: 0845 6004922
[www. Leisurecp.co.uk](http://www.Leisurecp.co.uk)

Part no. 300.1913.80/ R.AD/23.07.2010